

# THERMAL REMOVAL

## WATER THERMAL REMOVAL

The Thermal Removal software is primarily used to facilitate reading of fuel assembly numbers during core mapping. The natural creation of thermals in the water can be disturbing when numbers or assembly details shall be seen, the SW reduces this negative effect on the visibility.

## APPLICATIONS

- The thermal removal SW is a part of the Inspection Station

## SPECIFICATIONS


## BENEFITS

- Facilitates reading of fuel assembly numbers during core mapping

*We reserve the right to alter specifications without prior notice*

---

## THERMAL REMOVAL IMAGES

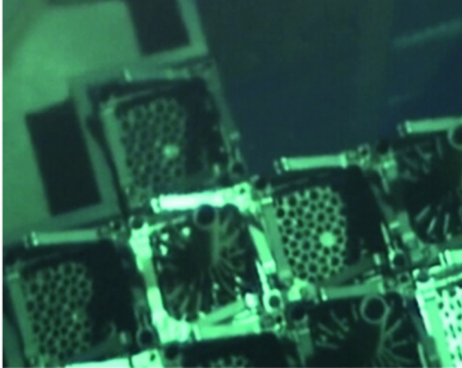

*We reserve the right to alter specifications without prior notice*